



Installation instructions for WIPER shower channels

CAUTION. Please read the instructions carefully before installation.


1. A diagram showing the various parts of the channel and their dimensions can be found on the reverse side of the page.
2. We recommend that you do not remove the protective foil from the grating until the installation is complete.
3. The instructions refer to the correct installation of the channel only and do not include information regarding insulation of other elements of the shower cabin such as sealing the connections between the shower walls and floor as well as water proofing.
4. The channel should be installed together with the syphon trap and then the adjustable legs should be glued in the places shown

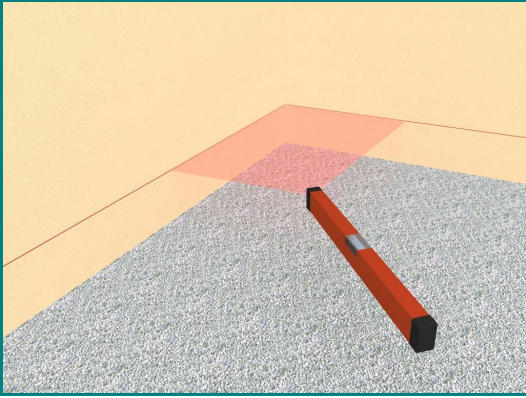


1. Set the level of the finished shower floor surface and mark it on the wall in the area where the channel will be fitted (allow for the slope of the shower surface)

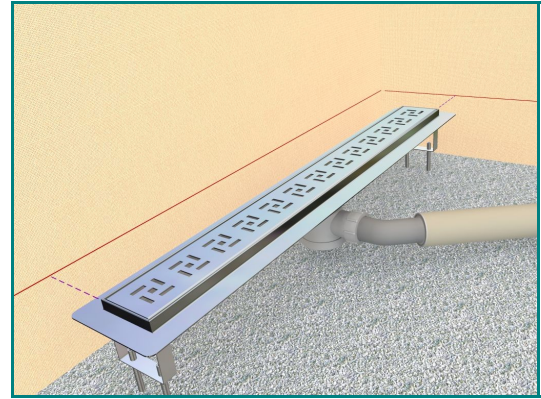


2. Connect the channel to the drainage system and set the height using the adjustable legs so that the upper edge of the frame is approximately 1mm below the finished surface level of the shower.

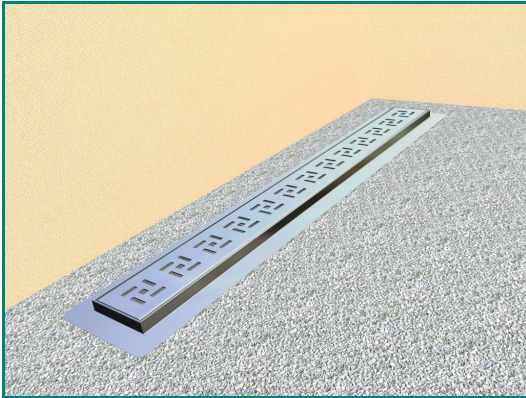


3. Fill the space under and around the channel with screed or a similar product to the level of the flange.

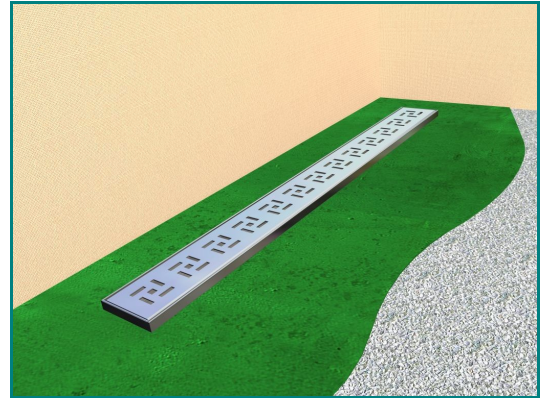


4. Cover the flange and the surrounding area with an insulating foil in a liquid form.

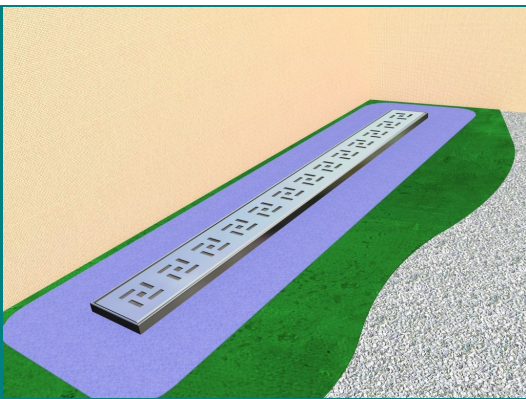

5. Apply the sealing membrane in position on the freshly applied liquid foil.

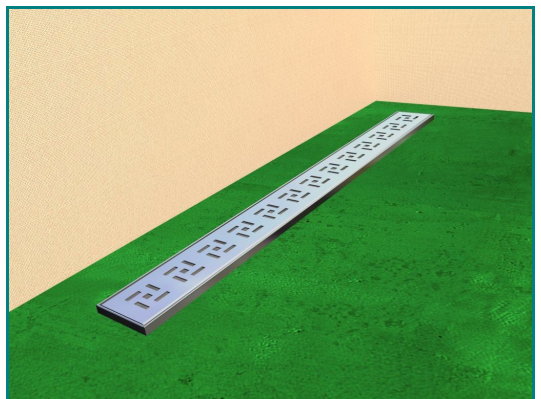

6. Apply a second coat of the liquid foil to the whole surface of the shower area and the sealing membrane.

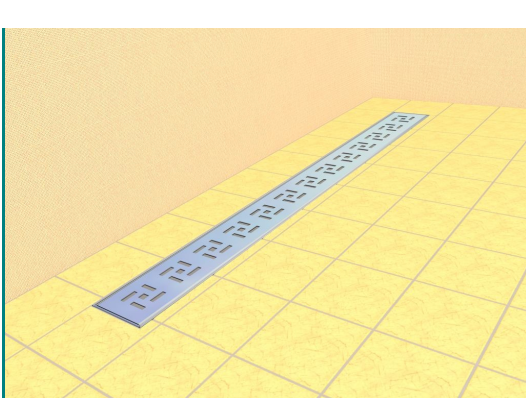

7. Once the liquid foil is completely dry as per the manufacturer's instructions, the shower surface can be tiled (eg ceramic tiles or granite). Seal the gap between the tiles and the channel frame with flexible sanitary silicone compatible with the tile and grout colour.

